

I hold you, support you.

From the moment you hold your newborn baby in your arms, a deep connection is formed. It is a bond that can never be broken, one that will only continue to grow and strengthen over time.

As your child grows, you will be there to carry them through life, providing unconditional love and care. Being their pillar of support, offering guidance and protection through the good times and the bad.

This is the story of a deep connection that will last a lifetime.





ATTENTION! - BEFORE USING THE CARRIER, READ AND UNDERSTAND ALL PROVIDED INSTRUCTIONS. RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

⚠ WARNING: FALL AND SUFFOCATION HAZARD

FALL HAZARD - Babies can slip through wide leg openings or fall out of the carrier.

- Ensure to adjust the leg openings to securely fit your baby's legs.
- Before each use, always check that all fasteners are securely fastened.
- Make sure your baby is securely positioned in the carrier.
- Take special care when leaning or walking.
- Never bend at waist; bend at knees.
- Only use this carrier for babies between 8 lb and 45 lb (3.5 kg 20.4 kg).

SUFFOCATION HAZARD - Babies under 4 months can suffocate in this product if face is pressed tight against your body.

- Do not strap your baby too tight against your body when using the carrier.
- Ensure there's enough room for your baby's head movement.
- Keep your baby's face free from obstructions at all times.
- Constantly monitor your child and ensure the mouth and nose are unobstructed.
- For pre-term, low birthweight babies and children with medical conditions, seek advice from a health professional before using this product.
- Ensure your child's chin is not resting on it's chest as its breathing may be restricted which could lead to suffocation.
- Your child could become too hot in this product. Check the core temperature by touching the child's body by hand.

IMPORTANT!

KEEP ONE HAND ON YOUR CHILD UNTIL ALL STRAPS ARE PROPERLY SECURED AND FASTENED.

IMPORTANT!

BABY MUST BE CARRIED IN FRONT CARRY POSITION UNTIL THEY ARE ABLE TO HOLD THEIR HEAD UPRIGHT. THIS CARRIER IS NOT INTENDED FOR USE IN THE OUTWARD FACING POSITION.


IMPORTANT - SAFETY BABYWEARING CAUTIONS

- Regularly inspect the carrier for any signs of wear, tear and damage. Discontinue use if damaged in any way.
- Do not use or stop using the carrier if parts are missing or damaged.
- · Always check to ensure all buckles, buttons, snaps, straps are securely fastened before each use.
- Never unbuckle while your baby is in the carrier.
- Premature babies, children with respiratory problems and babies under 4 months are at greatest risk of suffocation.
- Keep the carrier away from children when not in use.
- Constantly monitor your child when using the carrier. Immediately take the baby out of the carrier if the baby shows signs of discomfort.
- Ensure your baby is securely positioned in the carrier including correct leg placement.
- The carrier can be used for babies that are unable to hold their head upright. Ensure proper positioning of the neck cushion to provide adequate neck support.
- Your movement and your child's movement may affect your balance. Always take care when bending or leaning forward or sideways.
- The carrier is not recommend for use during sport activities.
- Be careful with exposure to heat sources or the spilling of hot drinks while using the carrier.
- Never use the carrier while engaging in activities such as cooking or cleaning, involving heat sources or exposure to chemicals.
- Never wear the carrier while driving or being a passenger in a vehicle.
- Never use the carrier when balance or mobility is impaired because of exercise, drowsiness or medical conditions.
- The carrier is suitable for front carry position use starting from newborn (3.5 kg / 8 lb) onwards.
- The carrier is suitable for back carry position use starting from 6 months onwards.
- Back carry position should only be used after sufficient practice, preferably over a soft surface or with someone to help.
- Do not switch to back carry while your baby is in the carrier.



HOW TO ADJUST THE WIDTH


The bottom of the carrier's panel, has four adjustable settings depending on the lenght and weight of your baby. Each setting can be secured using the durable snaps found along the inside waistbelt of the carrier as shown below. Secure the front of the panel by snapping the male snaps into the female snaps located on the inside of the waist belt padding. Always ensure the body panel's fabric extends from your baby's knee to knee for optimal ergonomic support. Your baby's knees must be higher than their bum and the fabric should fully support their thighs.

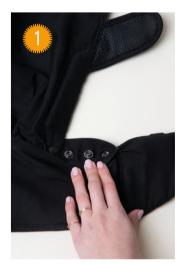

The narrowest setting can be used for newborns and babies, with a minimum weight of 3.5 kg / 8 lb and with a maximum weight of 7 kg / 15 lb*. Slide the body panel inward to its smallest size and attach one snap on each side, leaving the other snaps unused



The second setting can be used with babies 2-5 months of age. Until a maximum weight of 9 kg / 20 lb*. Adjust the body panel to a wider setting and attach two snaps on each side, leaving the other snaps unused.

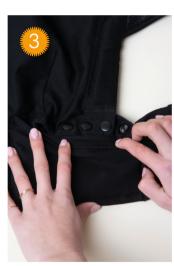

The third setting is suitable from 5 months. Until a maximum weight of 11 kg / 24 lb*. Adjust the body panel to an even wider setting and attach three snaps on each side, leaving the other snaps unused.

• Use this setting or #4 for back carry position.




The widest setting is suitable for taller babies 7 months and older. Until a maximum weight of 20 kg / 45 lb*. Adjust the body panel to the widest setting and attach all snaps on each side.

• Use this setting or #3 for back carry position.

^{*}Please note that the described age is a guideline.


QUICK GUIDE: CORRECT POSITIONING

The ergonomically correct position for the baby is to be positioned with the base of the carrier supporting them from knee to knee, with their knees slightly higher than their bottom in an "M" shaped position. When adjusting the size, always ensure proper placement of baby in the carrier including leg placement. See below the "M" position explained.

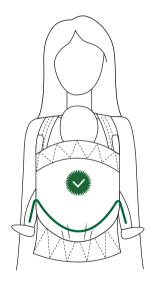


THE "M" POSITION

When the body panel is adjusted to fit your baby's size and comfort, they are positioned in the ergonomic "M" position.

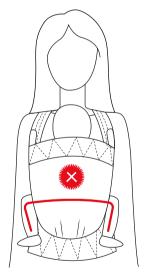

TOO NARROW

If the fabric doesn't fully support
your baby's thighs, adjust
the body panel to a wider setting.

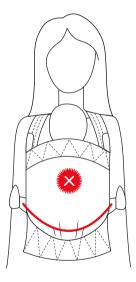


If the edge of the panel rests on the baby's calves, rather than under the bend in their knees, then the width you have chosen is too wide.


ADJUSTING THE NECK CUSHION

Personalize your baby's comfort with our adaptable neck cushion, offering two adjustable positions for optimal neck support. See the illustrated options below for guidance.

- Ensure that your baby's head is close enough for you to kiss your little one on the head.
- Never cover a newborn's face while in the carrier.
- Ensure that the neck cushion is supporting the baby's head and neck, with their chin off their chest.
- Make sure that the baby is positioned securely (but not too tight) against your body, so that as you move you do so as one unit.

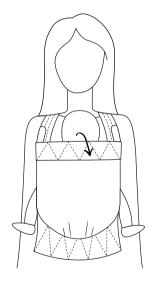

NECK CUSHION FOLDED DOWN.
Secure the neck cushion by using the press buttons.

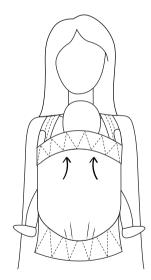

NECK CUSHION UP FOR EXTRA NECK SUPPORT.

Secure the neck cushion by placing the male buckle on the neck cushion into the female buckle on the shoulder strap, until it clicks. Tighten the neck cushion by pulling on the adjustable strap until it has the correct comfort for your baby.



FRONT CARRY POSITION - INSTRUCTIONS From newborn (3.5 kg / 8 lb) onwards.



Position the waistbelt around you so that the panel is centered on the front of your body.



Place the male buckle under the elastic safety loop.



Place into the female buckle until it clicks.



Tighten the waistbelt by pulling the adjustable strap until it lays flat against your body snugly resting above the hips.



Roll up the excess lengths of the strap in the elastic loop attached to the end of the strap.



Before use, make sure all buckles are unfastened and make the shoulder straps as long as possible. Pull the body panel up and place the left shoulder strap over your left shoulder.



Switch hands. Reach for the left shoulder strap. Pull it diagonally across your back.



Place the male buckle into the female buckle on the right side of the body panel until it clicks.



Roll up the excess lengths of the strap in the elastic loop attached to the end of the strap.



Place your child on your right hip.



Repeat with the second shoulder strap. Bring the right shoulder strap across your back. Now, the straps should be crossed behind your back.



Support your child with one hand and gently guide their right leg between the panel and your body using your other hand.



Place the male buckle into the female buckle on the left side of the body panel until it clicks.



Continue to provide support for your child as you guide their other leg underneath the already buckled strap.



When wearing the neck cushion up. Raise the neck cushion up.



Pull up the right shoulder strap and place over your right shoulder, while still holding your child with your left hand.



Place the male buckle on the neck cushion into the female buckle on the shoulder strap, until it clicks. Do this on both sides. Pull the straps to adjust the neck support's width.



Tighten both side straps for a comfortable fit. Make sure your child is not pressed to tightly against your body. Ensure there's enough room for your baby's head movement.



Adjust the shoulder straps to your comfort by tightening or loosening them toward your back. Make sure the carrier does not tilt to one side.

Tip: Check in a mirror.



Ensure that the child's bottom is seated deeply in the panel just above the waistbelt by gently pushing up on the child's calves. Baby should be seated in "M" shaped position with a slightly rounded back.

BACK CARRY POSITION - INSTRUCTIONS

From 6 months onwards.

WARNING:

Do not use this position for babies without full neck, head and torso control.

Please have someone assist you until you feel comfortable putting your chilc in this position on your own.



Position the waistbelt around you so that the panel is centered on the front of your body.



Place the male buckle under the elastic safety loop.



Place into the female buckle until it clicks.



Tighten the waistbelt by pulling the adjustable strap until it lays flat against your body snugly resting above the hips.



Roll up the excess lengths of the strap in the elastic loop attached to the end of the strap.



Grasp the shoulder strap and pull the shoulder strap fully through the slider until its maximum. This will shorten the shoulder strap.



Place the male buckle into the female buckle on the same side of the body panel until it clicks. Repeat this with the other strap. Both shoulder straps need to be adjusted to the same length.



Slide the body panel to your left hip.



Place your child on your left hip.



back, while ensuring that the bum is centered in the panel.



Clip the shoulder strap connectors together in front of your chest and adjust to your comfort. Ensure your child is comfortable and not tightly pressed against your body.



Lean slightly forward. Hold both straps around your child's neck while rotating the carrier around your waist. Ensure there's enough room for your baby's head movement.



Fold up the excess fabric of the shoulder straps and place underneath the shoulder strap. Roll up the excess lengths of the strap in the elastic loop attached to the end of the strap.



Keep a slight forward lean to provide a resting position for your child. Grasp the right strap into your right hand and the left strap into your left hand.



Ensure that the child's bottom is seated deeply in the panel just above the waistbelt by gently bouncing the child into the carrier to move the top of the panel higher up the child's back. Gently push up on your child's calves so that the legs remain in the "M" position.



Slide your arms one by one through the straps, similar to putting on a backpack. Tighten both side straps for a snug fit around the leg openings and supporting your child's torso. Ensure that your child's arms can move freely.

I'll carry you. I'll care for you. I support you.

WASH & CARE

- Remove stains with a damp cloth rather than washing your baby carrier too often.
- You can wash the baby carrier by hand or soft machine cycle, using water no hotter than 30°C (86°F).

 Only use delicate liquid detergent. Please see care instructions on the product label for more information.
- Line dry in the shade. Do not tumble dry. Only use hot steam setting when ironing.
- Always close buckles, elastic loops and press buttons before washing or storing.
- Do not iron buckles, elastic loops and press buttons.

DISCLAIMER

Karē uses high quality and safe dyes to ensure a product will retain its colour as much as possible. There is always as possibility that colours will fade with washing or light. Karē cannot be held responsible for faded colours due to laundering.


LIMITED WARRANTY

Karē provides a limited warranty for its products against defects in materials and workmanship. The Karē Free Baby Carrier has a one-year limited warranty against manufacturing flaws. In the rare instance in which there is a manufacturing issue or flaw, we will work with you to provide you with a refund, repair or exchange. Our products are handmade and may have slight variations that do not affect their use or safety. Normal wear, fabric fading, minor size differences, common/normal wrap nubs or flaws, and sewing varieties are not considered manufacturing flaws and are not covered under the limited warranty. Proof of purchase is required for all returns or exchanges.

Should you have a warranty claim please contact Customer Service at hello@kareforall.com.



For a love that's skintight

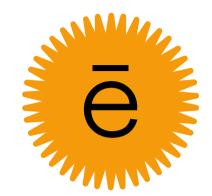

kareforall.com hello@kareforall.com

CEN-TR 16512-2015 **ASTM F2236**

Karē Burgemeester Stramanweg 101 1101 AA Amsterdam The Netherlands